



Door with crash bar measurements

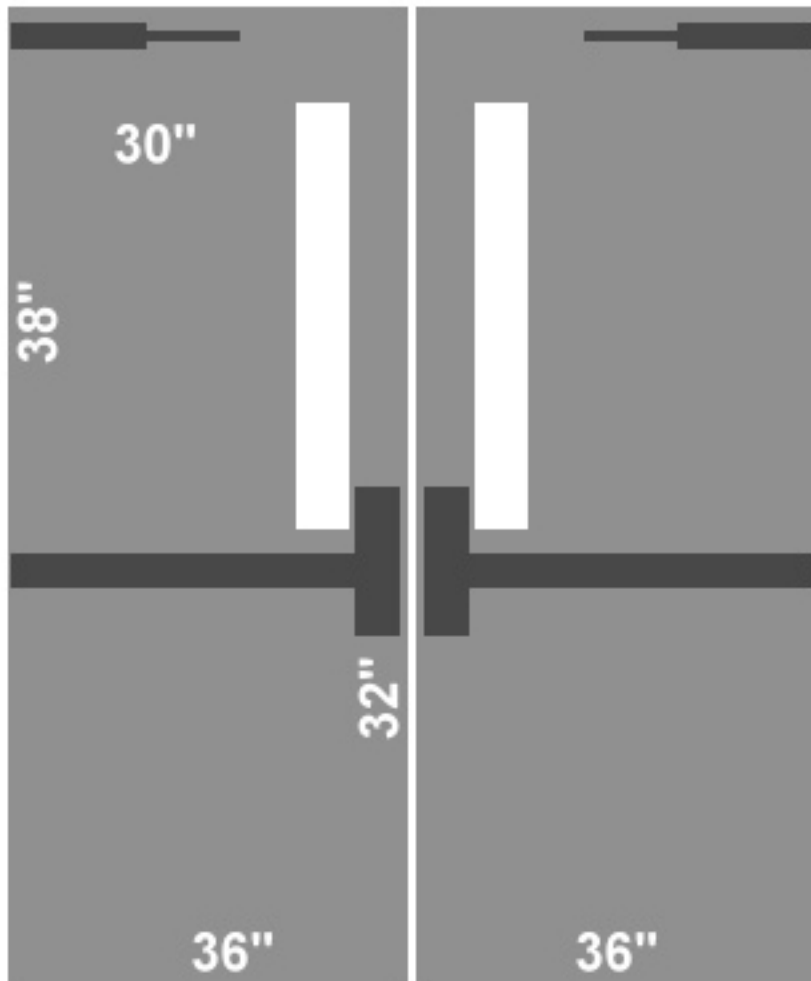


Pads have to stay clear of the crash bar. Nothing can impede their operation or you'll have an issue with the Fire Marshall.

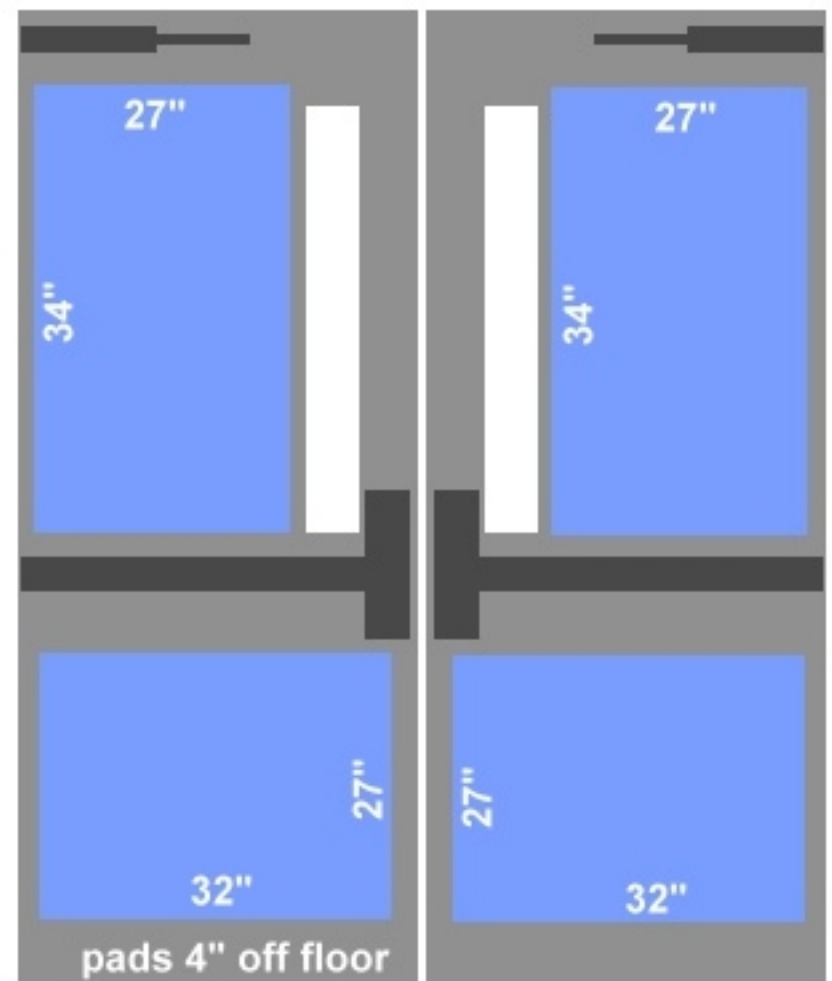

Door measurements

Sample pad. You measure the door itself in the closed position. I'll note where I leave a gap for the hinge and latch side depending on if the door swings in or out of the space.

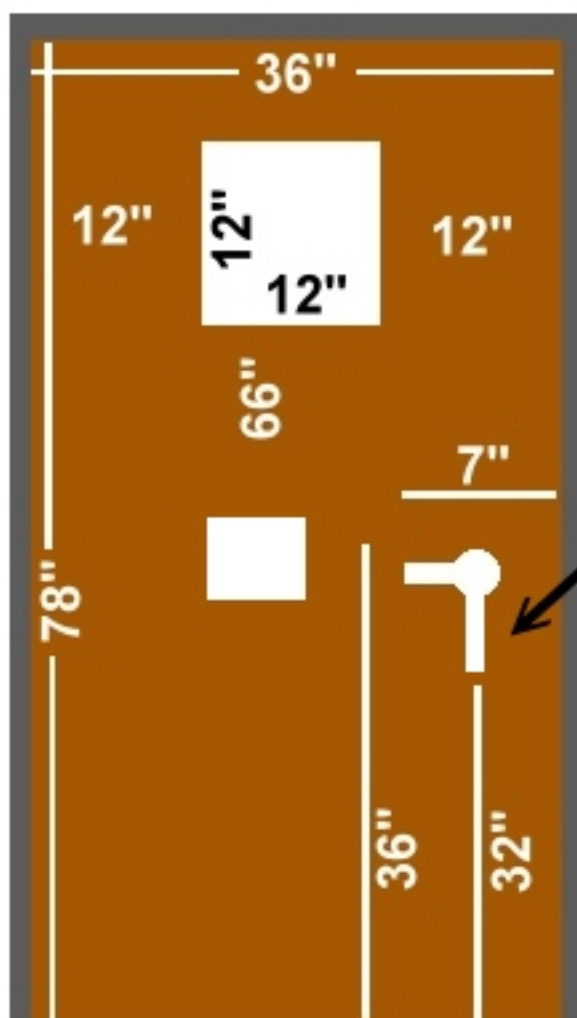

If handle swings down measure in the down position.

