

## Field Cutout Guide



Place the panel with the padding side down.  
Be sure you are on a non-abrasive surface!

1. Locate where the cutout needs to be.  
Recommend making the hole 1" larger than  
the obstruction. That is the dimension of the  
finishing framework insert we'll make for it.

2. With a jigsaw or utility knife, scribe through  
the 7/16" OSB in the same dimension of the  
framework provided for that obstruction.

3. With a utility knife remove the 2" padding  
making sure not to cut the vinyl.

4. With a utility knife, cut the vinyl in an "X"  
and pull the tabs back through the hole and  
staple or tape to OSB.

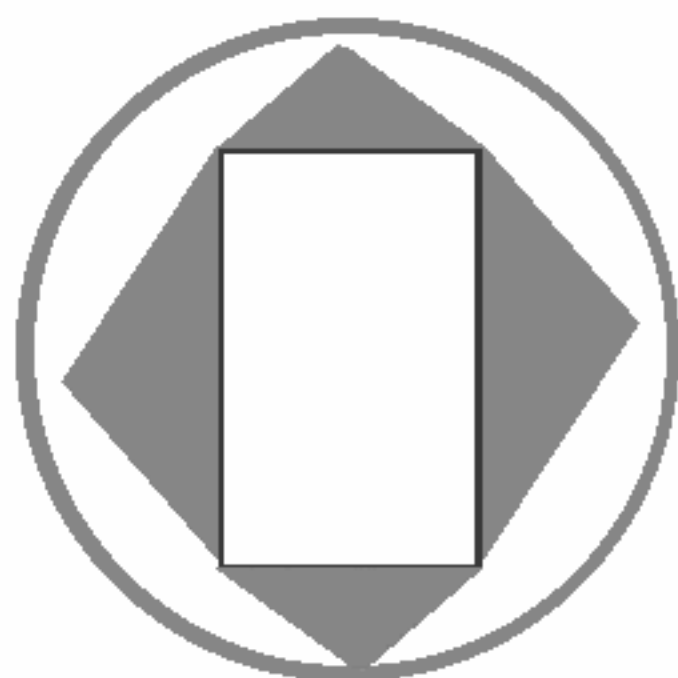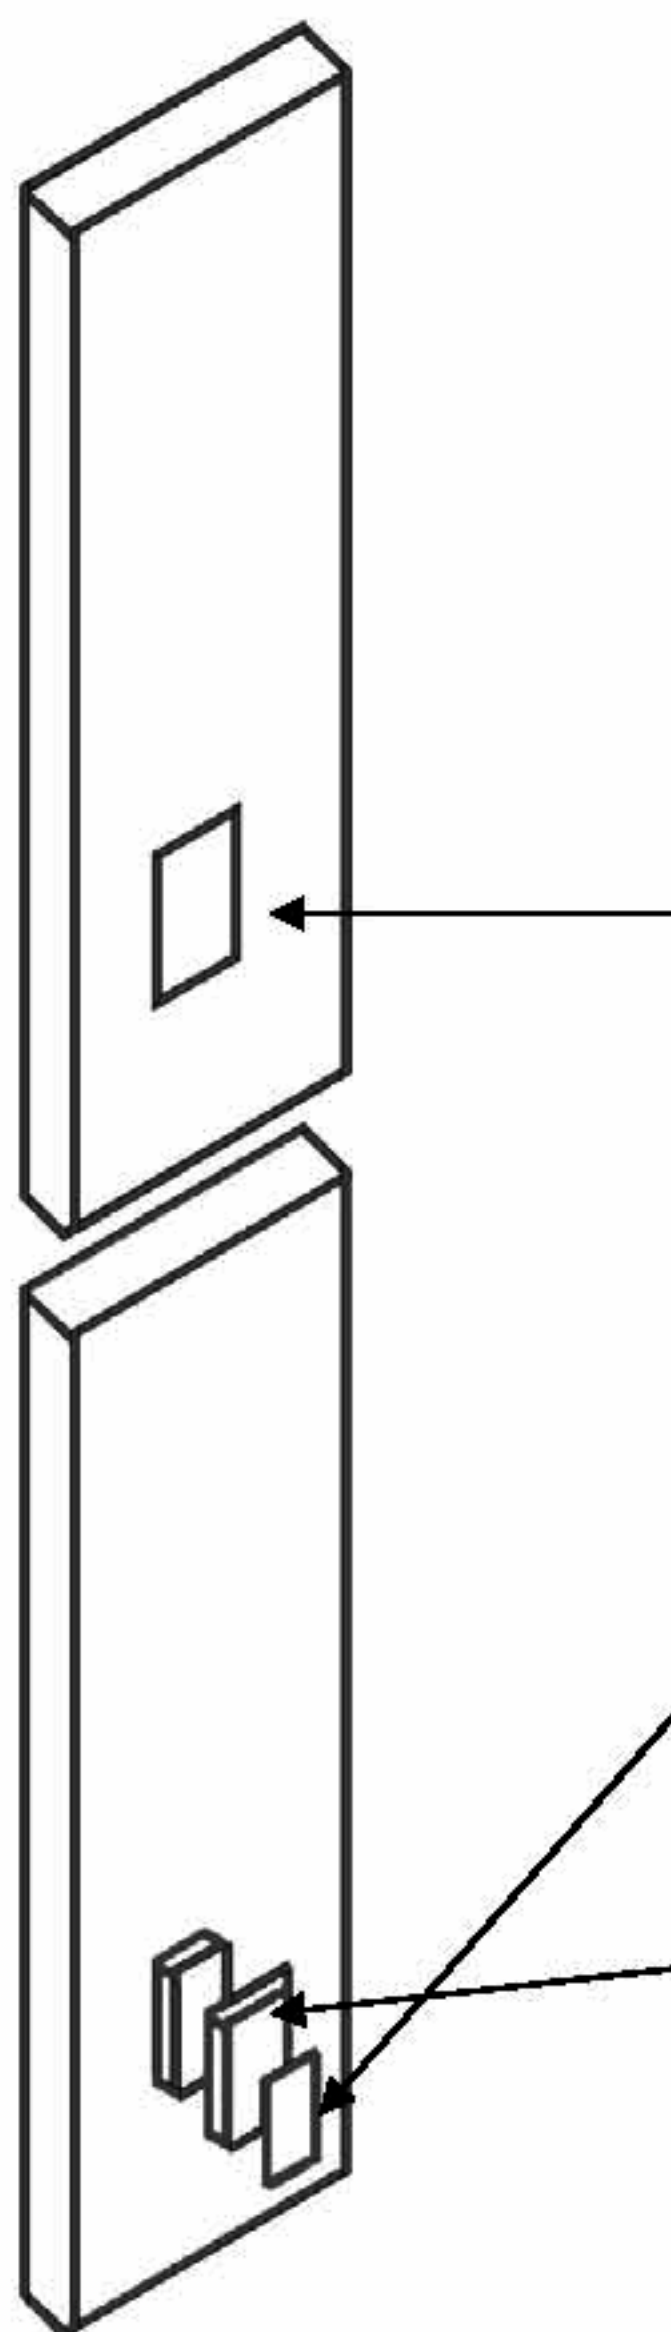

5. Flip the panel over to the pad side  
and insert the framework for a clean,  
finished professional look. (Not shown.)