


i-beam

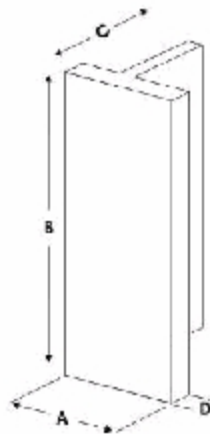

i-beam

Easiest pad is an i-beam pad the wraps the front face of the beam. We need height and face measurement of beam.

C just ensures that there's enough room to wrap behind the face.